# **INSTALLATION INSTRUCTIONS**




### **BKTIMER-3HR-BW**



### **Inbuilt 3-Hour Timer**

<b>Specifications</b>	Resistive
120 VAC	15AMP
240 VAC	16 AMP
Time	0 - 3 Hours



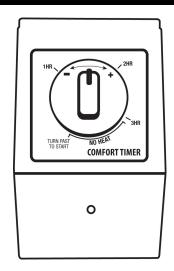

# $\bigwedge$

## **WARNING**



**READ CAREFULLY** - These instructions were written to help prevent difficulties that might arise during thermostat installation. Studying the instructions first may save considerable time and money later. Observing the following procedures will keep installation time to a minimum. Save these instructions for future use.

#### Instructions

The BKTIMER may be installed on either the right or left junction box of the heater

 
**WARNING**: disconnect the power at the Circuit Breaker before installing.

 
Caution do not cut both factory splice caps on left side you need only two wires for installation

Cut Factory Splice as shown. This leaves two wires for power connections: one wire for an inline switch connection to power supply and the other wire for a second power line or common.


### **BKTIMER-3HR-BW**


- 1. Red timer wire to black supply wire
- 2. Black timer wire to heater
- 3. White Supply wire to heater
- 4. Bare Ground wire to green ground wire






Heater wiring without Timer

 

 



Factory wire splice cutting diagram

### Black wires (Heater)

 

#### **WIRING DIAGRAM**

 

 

KING ELECTRIC MFG CO · 9131 10TH AVENUE SOUTH · SEATTLE, WA 98108 · PH:206 762 0400 · FAX: 206 763 7738 · www.king-electric.com